

## Installing SFIC cylinders into Olympus cabinet lock bodies



**Figure 1**  
Prong  
position

### Step 1


Make sure the prongs inside the lock body are at the approximate angle indicated in **(Figure 1)** and the lock is in the fully locked or unlocked position.



**Figure 2**


### Step 2

Insert key labeled CONTROL into cylinder and turn slightly clockwise to the 1:00 o'clock position **(Figure 2)**. This will retract the locking bar **(Figures 3 & 4)**.

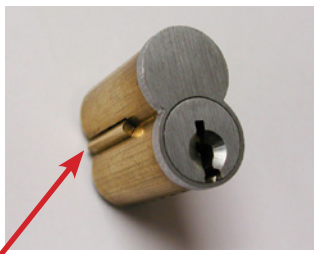

Locking  
Bar

**Figure 3**

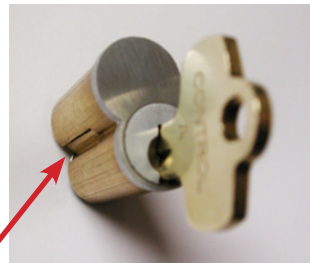

Control key  
will retract  
locking bar

**Figure 4**



**Figure 5**

### Step 4

With the CONTROL key in the 1:00 o'clock position, insert the cylinder all the way into the lock body **(Figure 5)**.



**Figure 6**

### Step 5

Return the CONTROL key to the 12:00 o'clock position **(Figure 6)** and remove the key. The cylinder will now be locked into the lock body **(Figure 7)**.



**Figure 7**

### Step 6

Reverse the above procedure to remove the cylinder from the lock body.